

## Type of grease

Grease

refer to „Specifications for Service Products“

Page 266

## Note

**In difficult road conditions or in continual short distance operations, grease front and rear axle at more frequent intervals!**

Clean grease nipples before greasing!


Total number of grease nipples:

Models 108, 111, 113 = 16


Model 109 = 18

## Front axle — grease nipples:


- Steering knuckle = 3 each
- Upper wishbone = 2 each
- Lower wishbone = 2 each

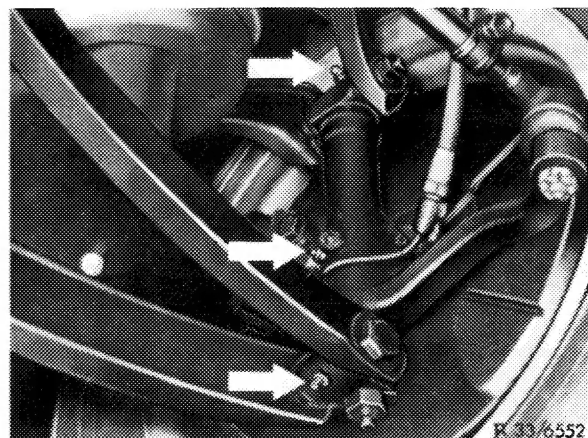


Steering knuckle

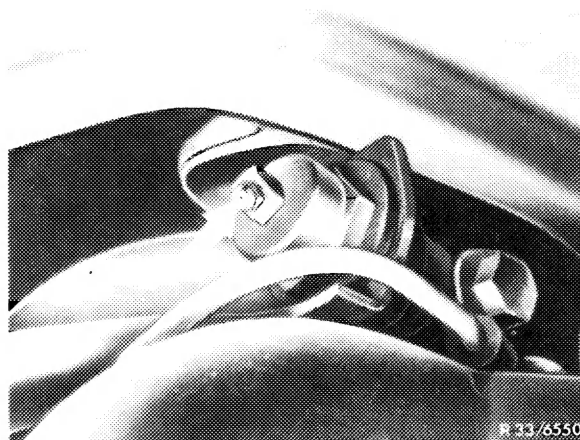


Upper wishbone front

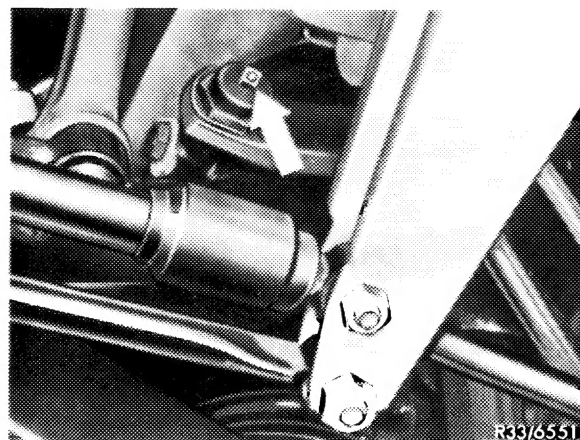

Upper wishbone rear

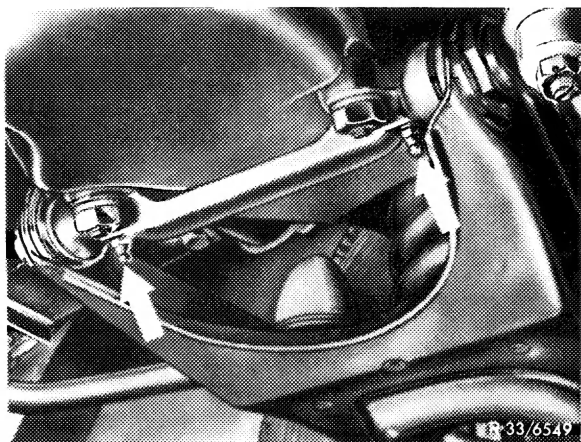


Lower wishbone

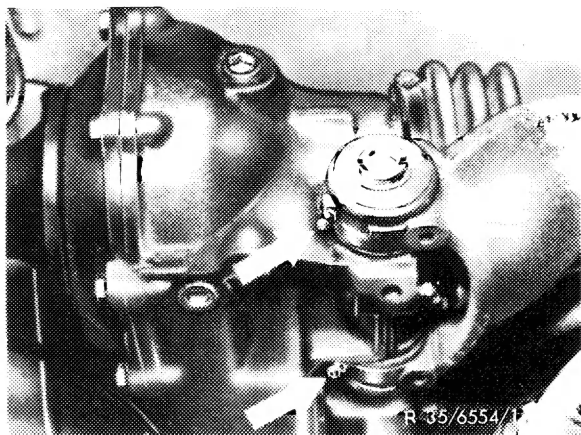

Axle tube seat, right

**Rear axle — grease nipples:**

- Rear axle tube seat (right) = 2

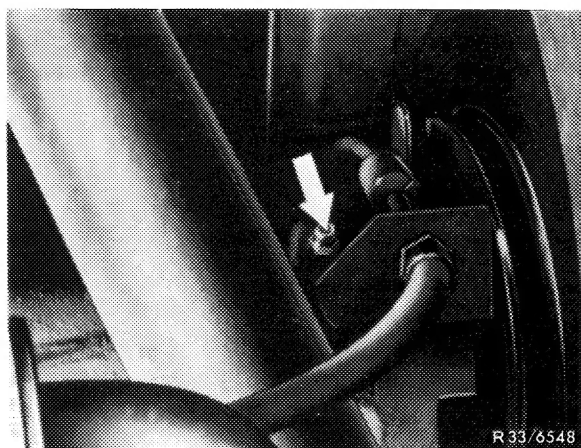

Anti-dive mounting on axle tubes

- On model 109 there is one additional grease nipple on the anti-dive mounting on the axle tube, left and right.